


FIXING CENTRE SPACING GUIDE	
Wind Zone	Fixing Centres
Low	600mm*
Medium	600mm*
High	450mm
Very High	450mm
Extra High	300mm
* Maximum 1200mm soffit board lengths. Lengths over 1200mm are required to be fixed at 450mm centres	

**DYNEXsoffit**


Standard Installation  
Dy nex Soffit

Scale:	1:2
Do not scale from drawings. Contact Dynex Extrusions Ltd for exact dimensions www.Dynex.co.nz 0800 4 DYNEX (0800 4 39639)	
Date:	March 2016
Detail No:	<b>SF-01</b>

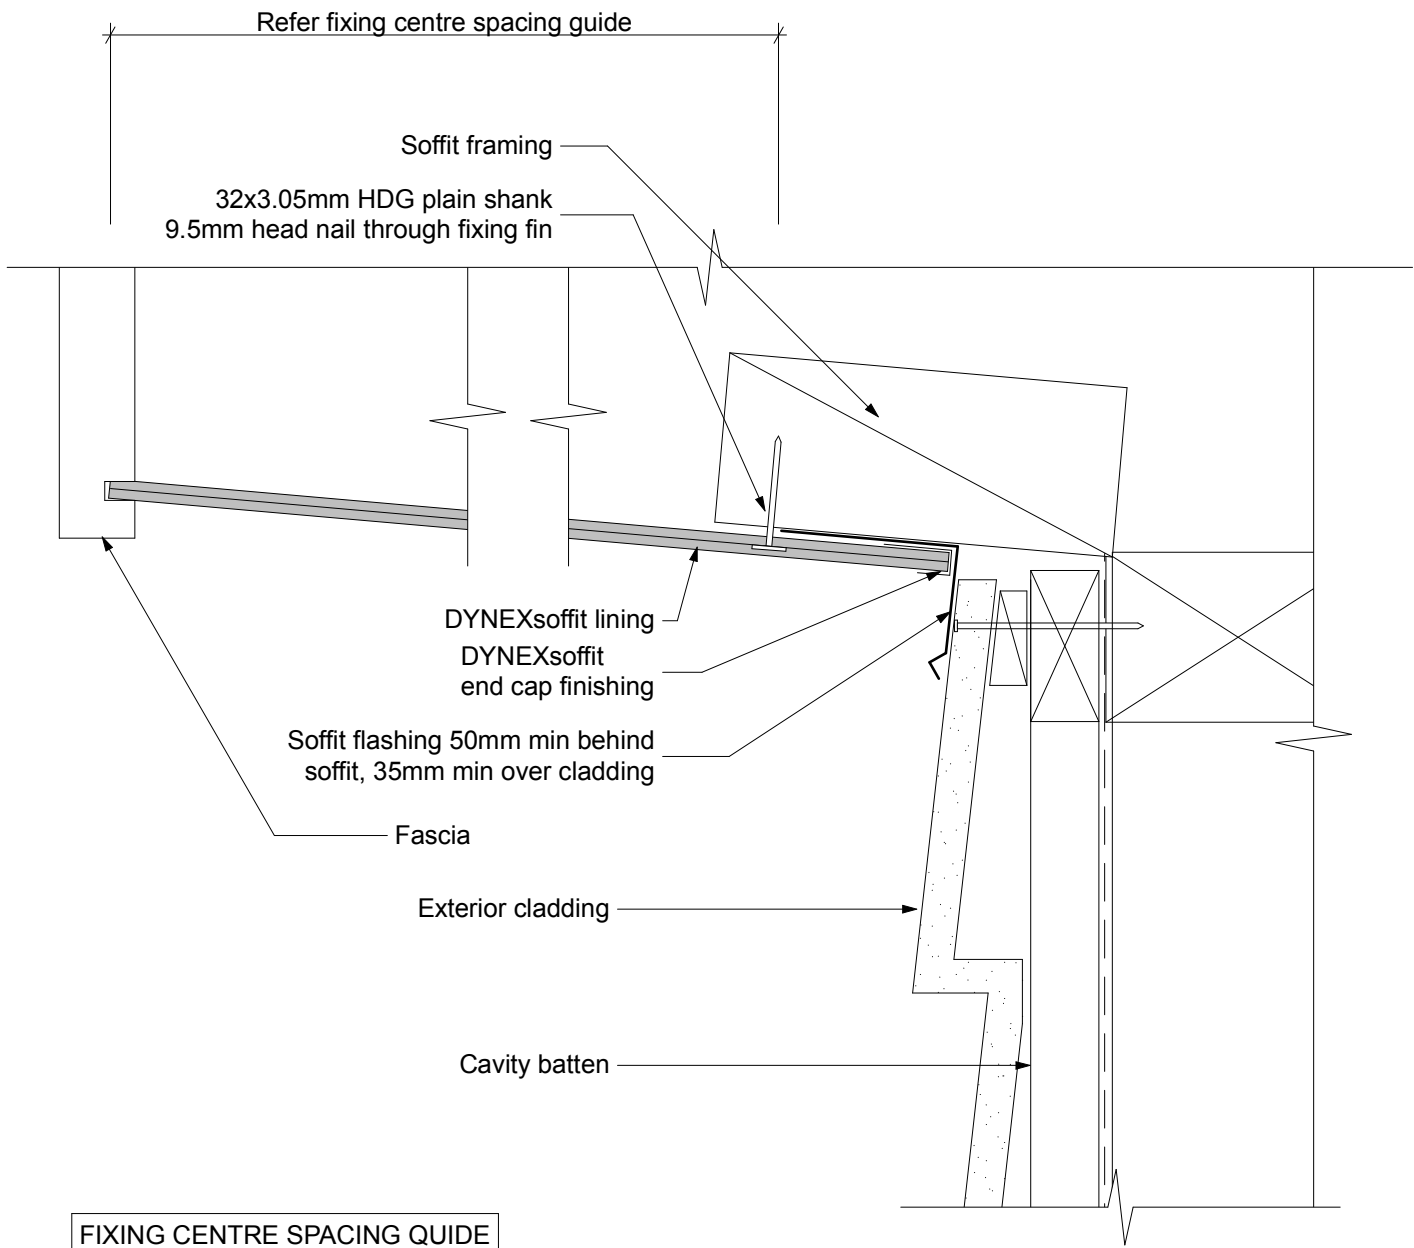

FIXING CENTRE SPACING GUIDE	
Wind Zone	Fixing Centres
Low	600mm*
Medium	600mm*
High	450mm
Very High	450mm
Extra High	300mm

\* Maximum 1200mm soffit board lengths. Lengths over 1200mm are required to be fixed at 450mm centres

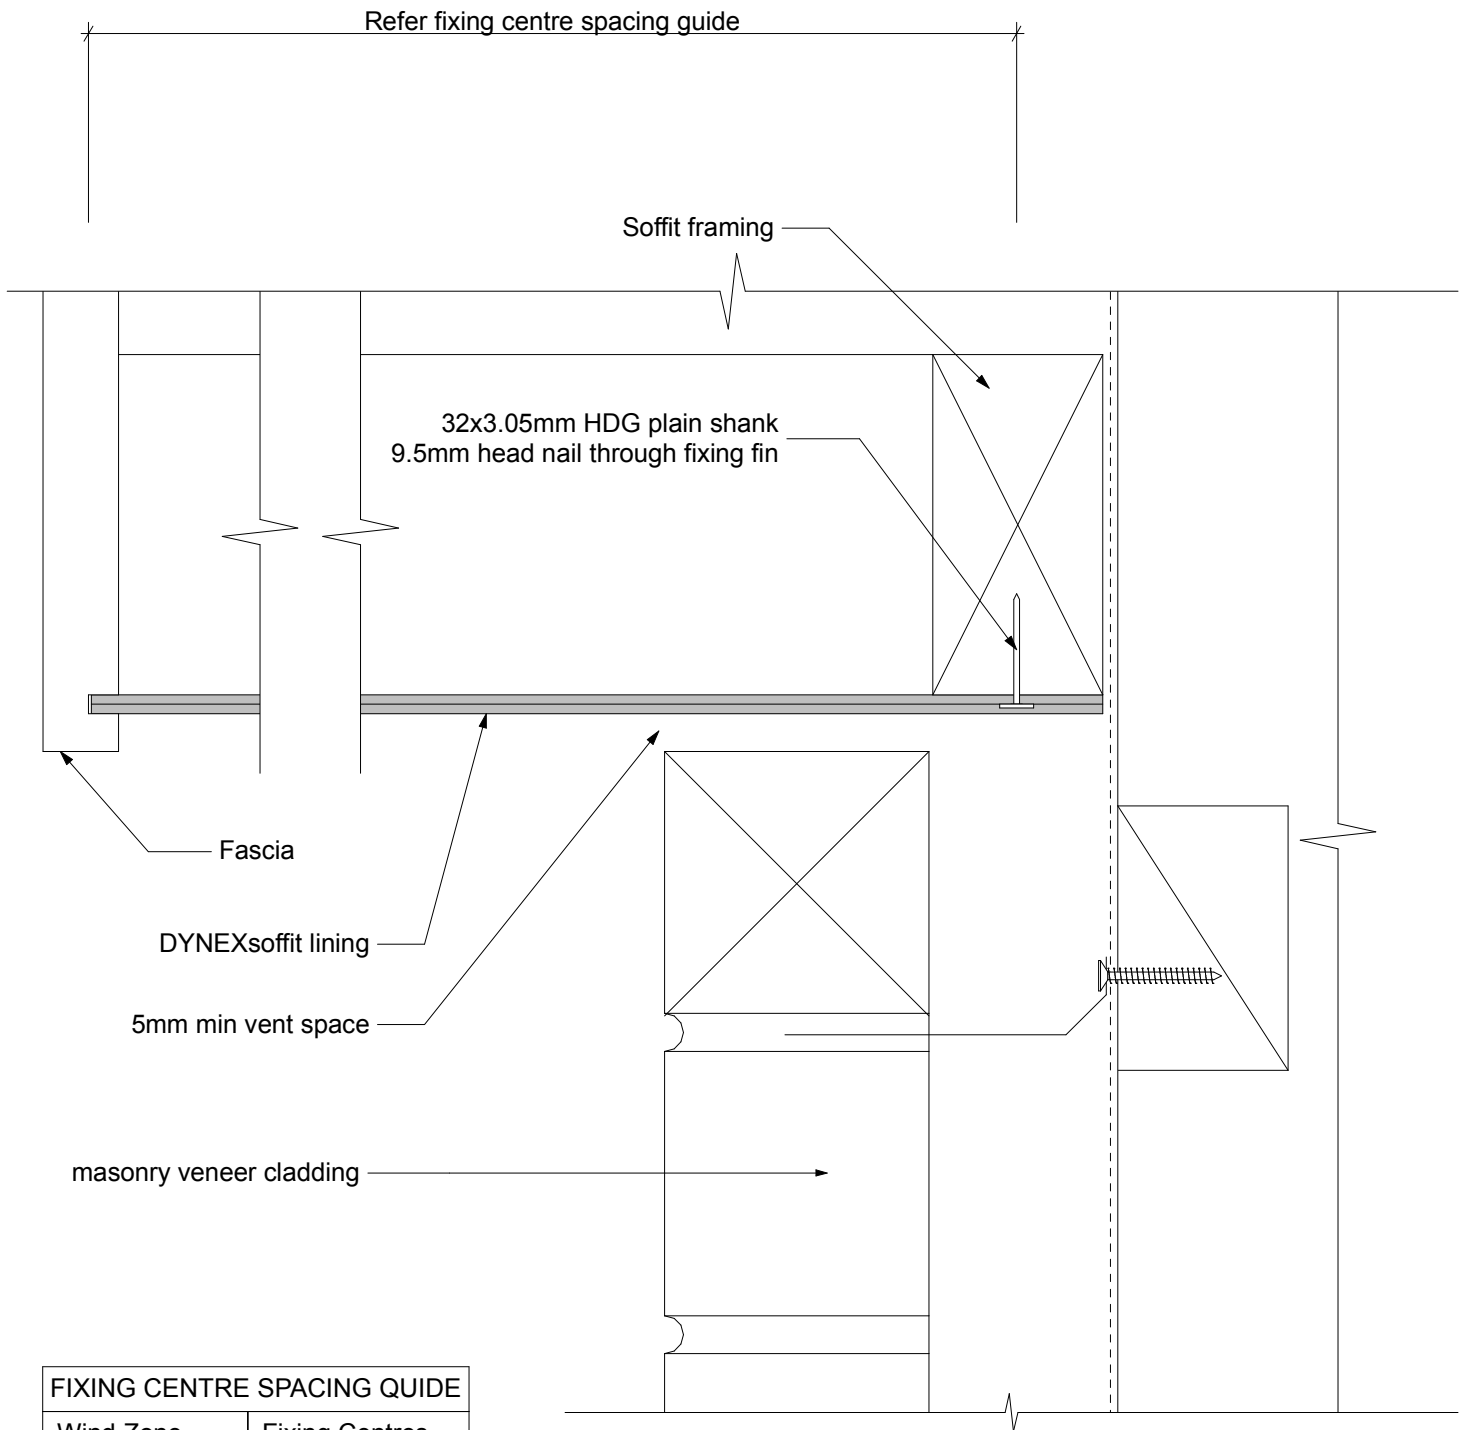

FIXING CENTRE SPACING GUIDE

Wind Zone	Fixing Centres
Low	600mm*
Medium	600mm*
High	450mm
Very High	450mm
Extra High	300mm

\* Maximum 1200mm soffit board lengths. Lengths over 1200mm are required to be fixed at 450mm centres