DYNAFLASH®
EAVES FLASHING

TYPICAL ROOF EDGE DETAIL

Scale 1:2

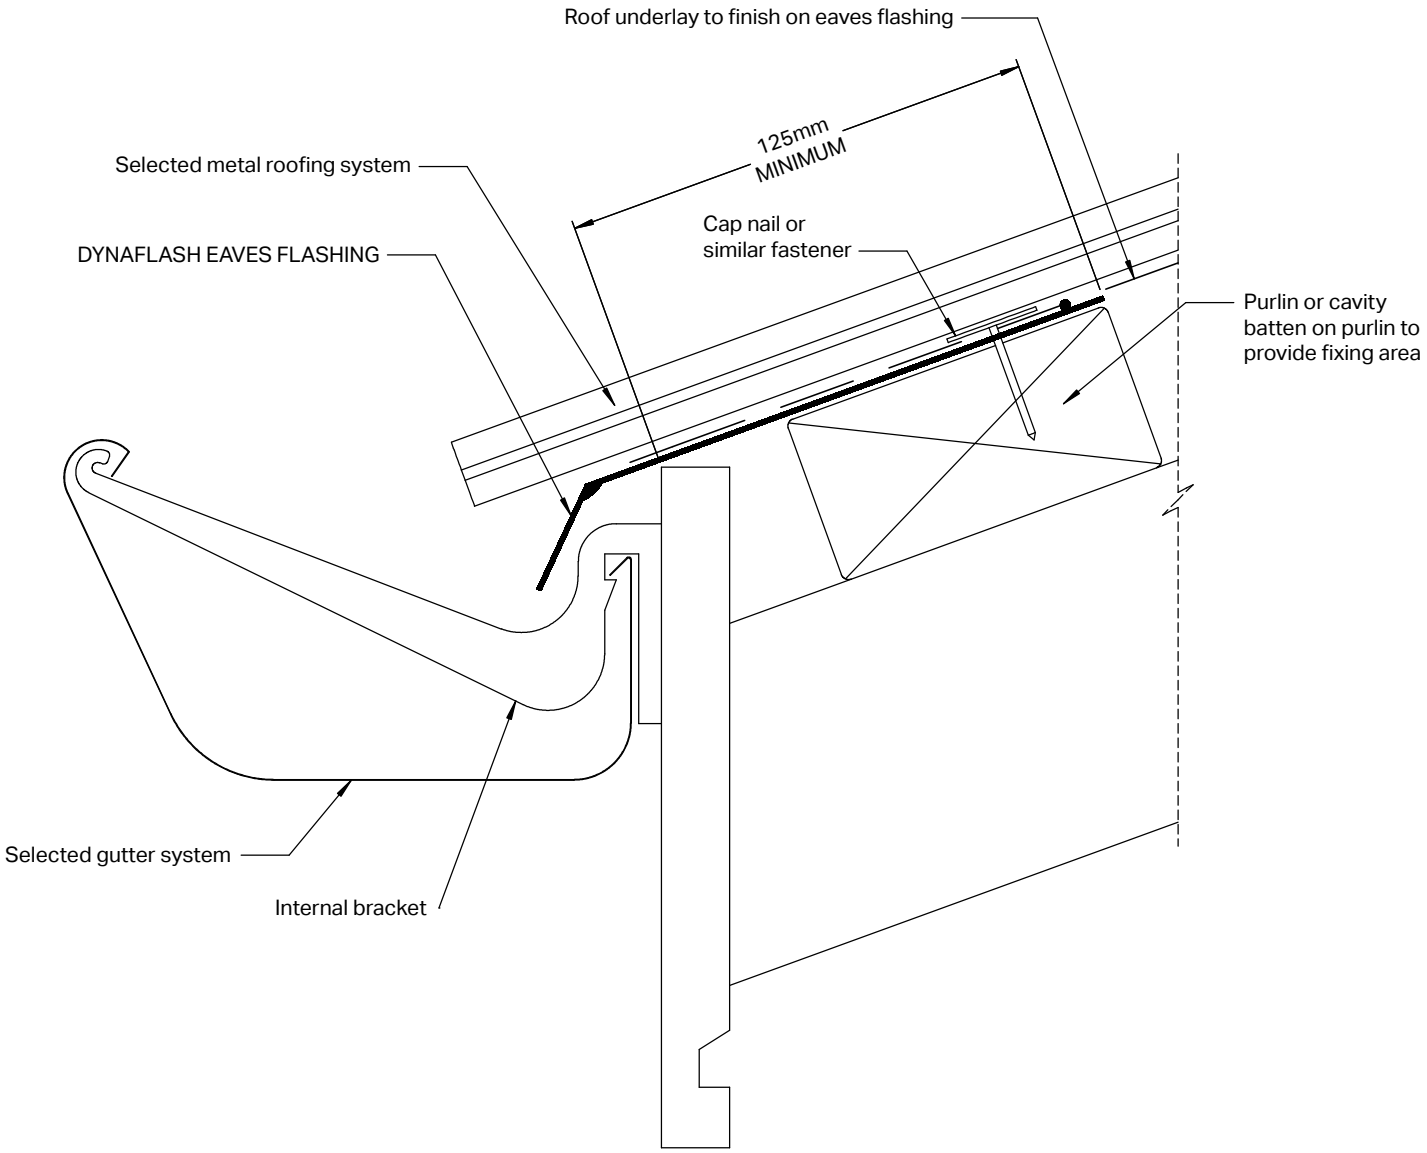

Notes

1. All components supplied by others shall be installed in accordance with the respective manufacturer's instructions
2. Refer to MRM Code Of Practice Section 8.5.4.4 Eaves Flashing
3. Ensure all fasteners are approved for use by manufacturers of the roof underlay and roofing system
4. Ensure all fasteners are suitable for the applicable corrosion zone
5. When installed over a double purlin, the fastener may be positioned above the sealing bead to optimise the flashing performance
6. Make sure the back edge of the eaves flashing sits at least 125mm back from the front fascia